

Installation techniques and detailing


Straight laid

June 2020

For areas not subjected to excessive spillage, cut the floor covering flush to the perimeter walls and skirtings and adhere the floor covering to the subfloor

using the correct AltroFix adhesive. Application of AltroMastic 100 to the perimeter subfloor is recommended.

Drawing Ref: D1/03/05

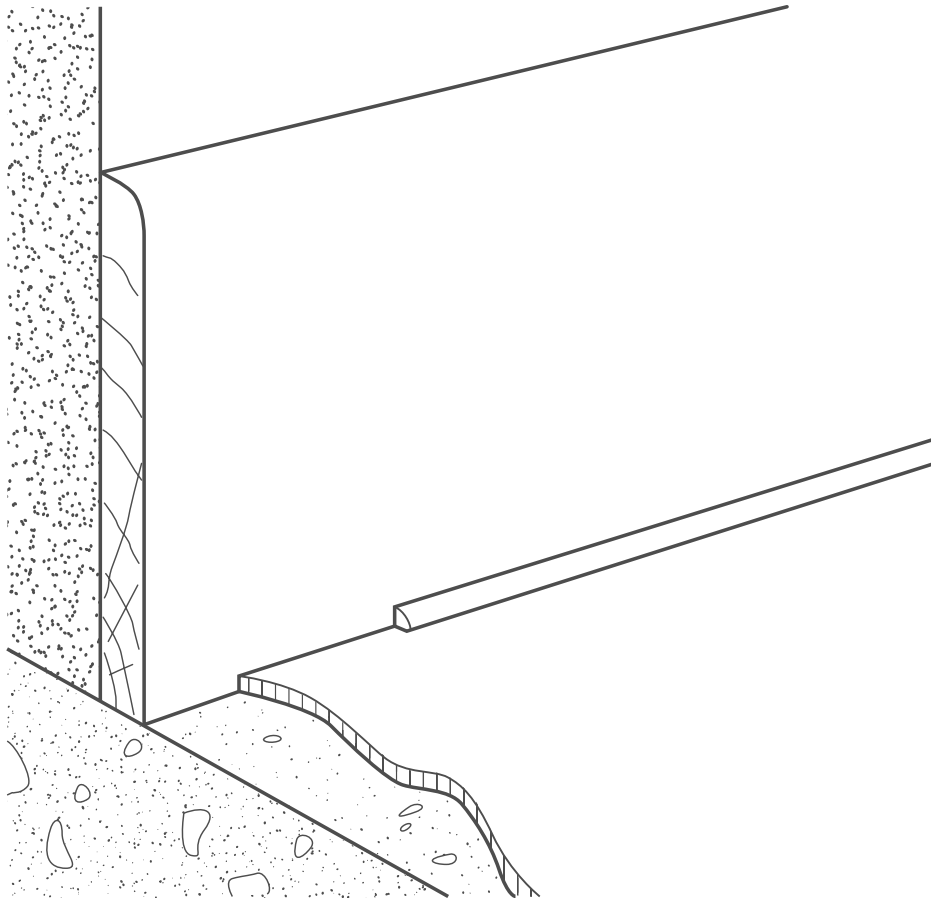

For further information or technical advice

tel: 01462 707600

email: enquiries@altro.com or www.altro.com