


Rebate reveal detail diagram

This is a detail that you might find in behavioral mental health installations, where a safe, tamper-resistant joint detail is crucial, as well as installations where end-users may want to replace flooring in the future without damaging the wall system.

Please refer to the installation instructions for rebate method.

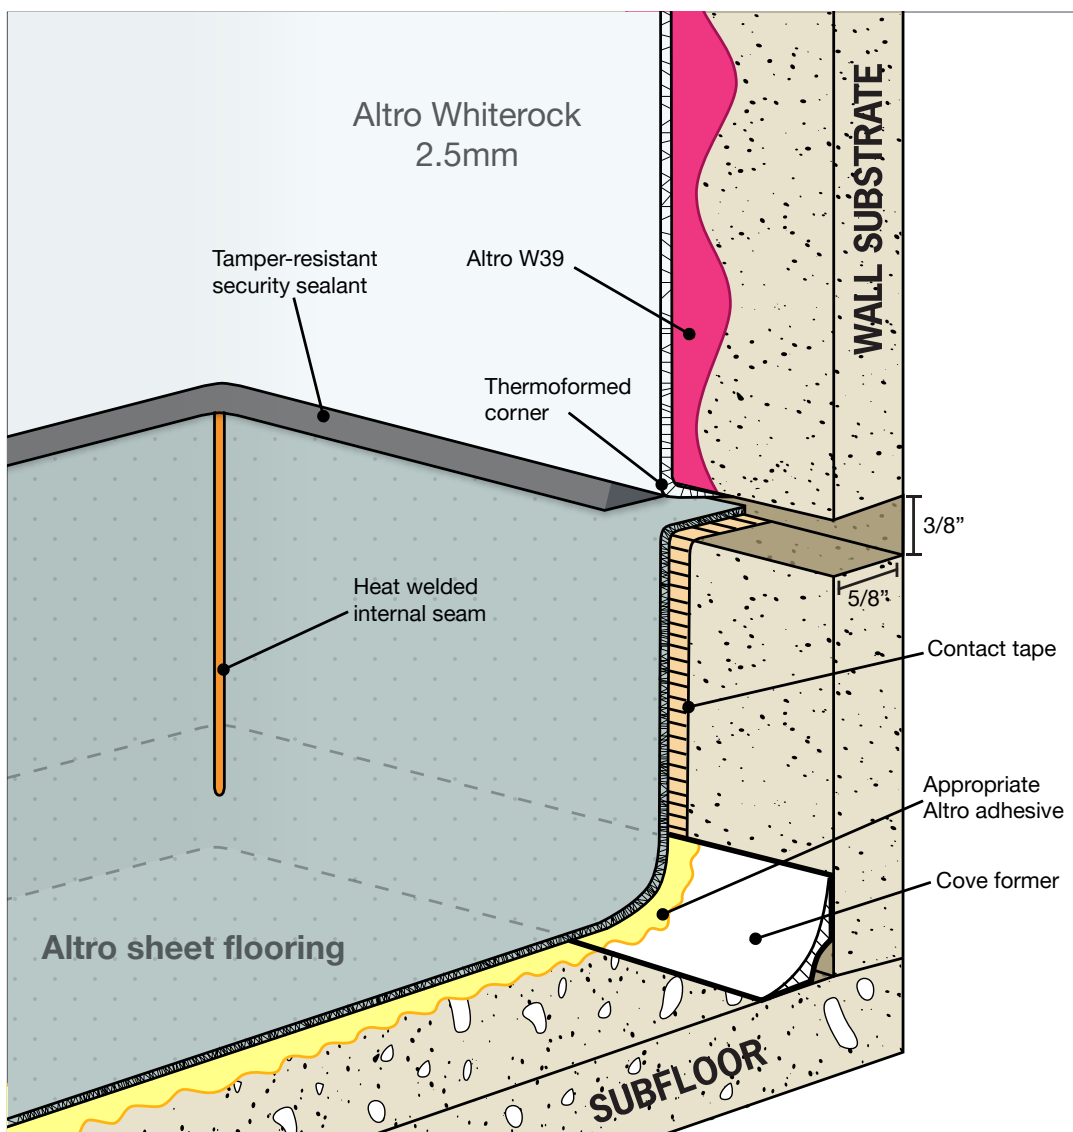

TIPS

- Rebate must be level and 3/8" high by 5/8" deep.
- Some thicker flooring materials may need the backing to be grooved at the rebate.
- It's recommended to heat weld all inside and outside corners prior to tucking the floor into the rebate.
- When installing the Altro White Rock it is recommended to thermoform and install the inside and outside corners first and then fit the adjoining sheets.
- Be consistent with the radius of the rebate bend in the Altro White Rock in order to maintain uniformity of the radius from sheet to sheet.
- Altro W39 adhesive is the recommended choice for all Altro White Rock installations across all BMH care levels.