


### Fitting the Altro FlexiJoint profile

Prepare and fix the Altro Whiterock panel as described in this guide.

- Prepare the next panel as before then dry fit this panel to check that the joint between both panels is true and parallel
- Against the leading edge, temporarily fix three metal spacer bars (top, middle, bottom) to set the gap between the panels about 1/8"(3.4mm) width.
- Prepare and fit the next panel using the same procedure as previously described. Leave the protective cover on the strip of double-sided tape which butts against the metal spacer bars (this will allow for easier fitting when butting uptight to the spacer bars).
- Roll the panel to transfer the adhesive thoroughly to the substrate then remove the metal spacer bars.
- Ease out the edge of the panel to allow the protective cover to be removed from the double-sided tape.
- Press the panel back down to the substrate and reroll.

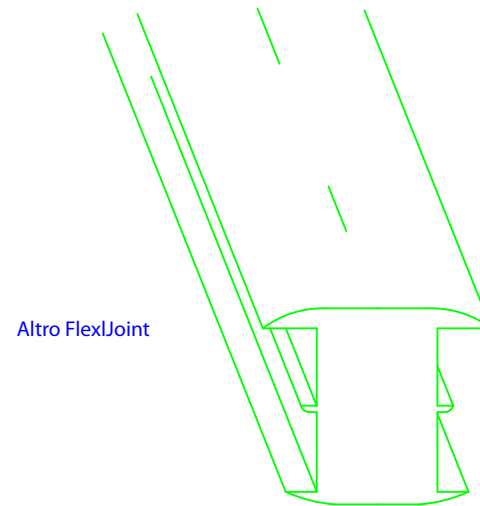

FlexiJoint design details:

