


Floor to wall heat-welded transition

Detail of a WSBU 200 vinyl backer shim

updated 06/10/2024

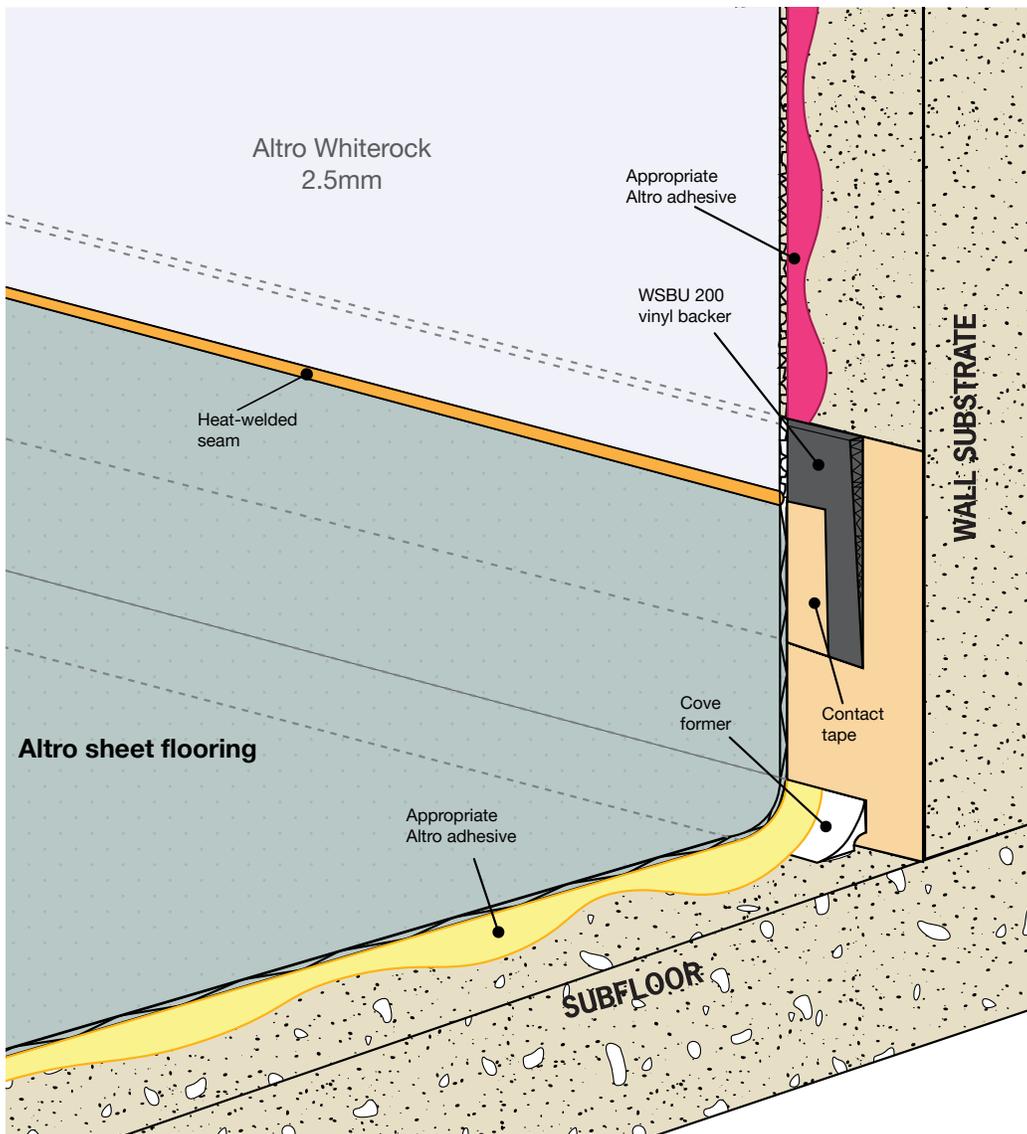

The key to proper heat welding at this floor to wall panel juncture is to have a solid backing behind the wall panel and flooring at this seam location. This is accomplished by using the Altro WSBU 200 vinyl backer.

This advanced method is for use in hygienic environments and to be performed by experienced installers. It is highly recommended a mockup of both inside and outside corners be done and approved prior to starting the installation.

Typical applications

- Pharmaceuticals
- Clean rooms
- ISO compliant laboratories
- Operating rooms
- Hygienic critical areas

