




altro

Mechanically fastened surface membrane clamping trench drain

Transition with Altro sheet flooring

updated 09/15/21

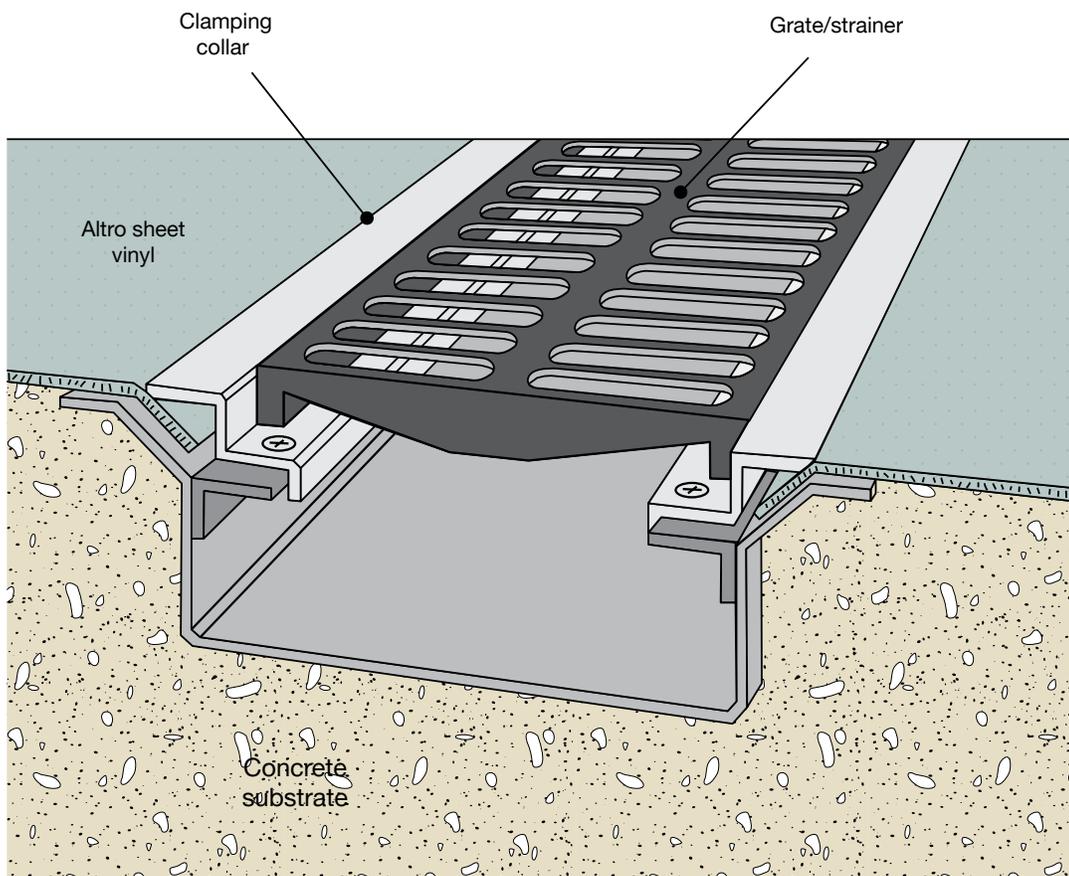

TIPS

- For Altro flooring to be successfully installed in wet areas (i.e. kitchens, showers, bathrooms, etc.) all penetrations must be finished properly to prevent moisture from leaking under the floor. This is done by mechanically fastening the flooring in place with surface membrane clamping plumbing fixtures. These fixtures clamp and seal the flooring edge to prevent moisture from penetrating the subfloor.
- Cutting the flooring material up to, or around, a drain, cleanout, trench drain, and other plumbing fixtures is not a recommended installation method.
- Plumbing fixtures are to be installed per manufacturer instructions.