


# Floor to wall overlap transition

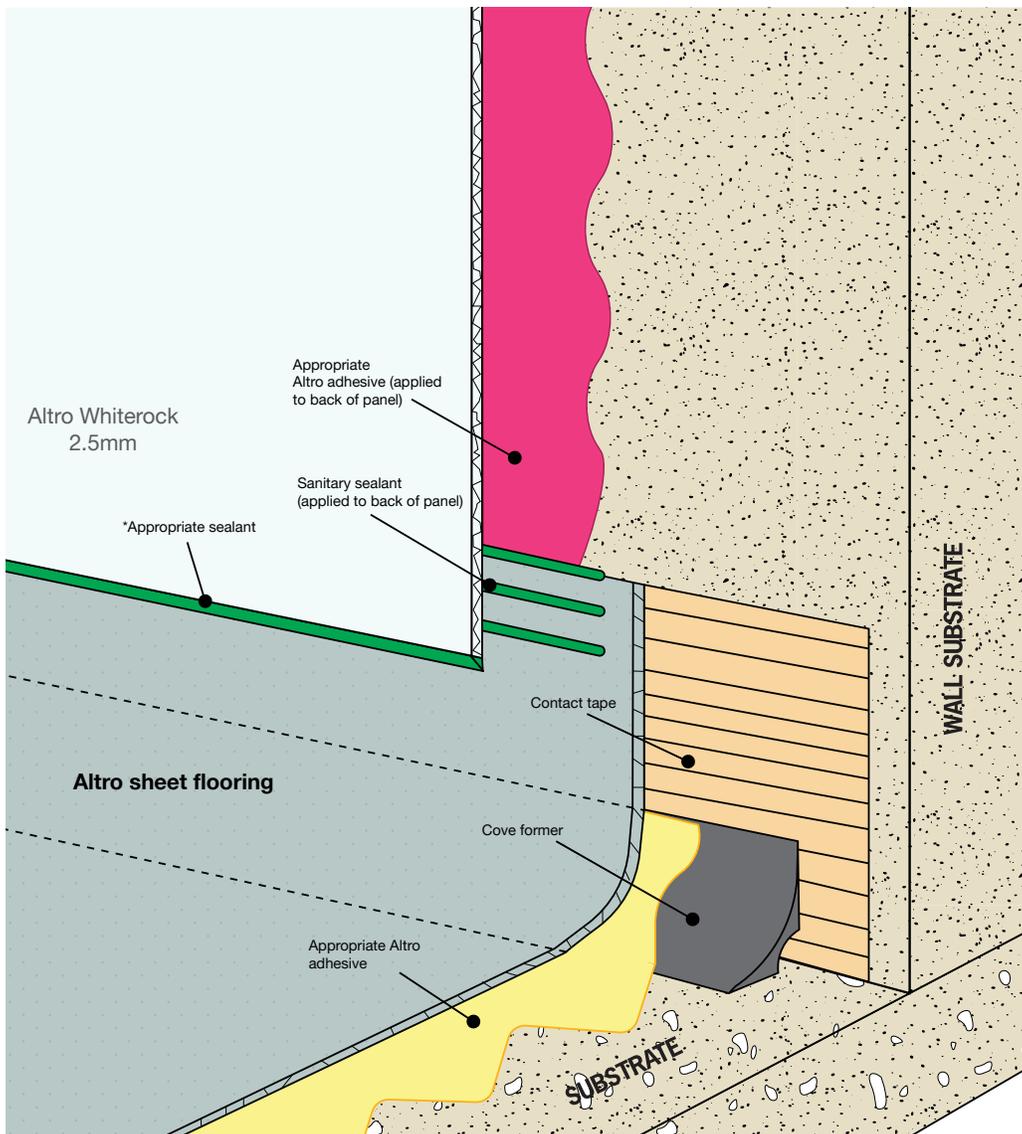

An overlap transition from floor to wall is our preferred installation method and is utilized in most installations. It is completed by installing the flooring 6" – 8" up the wall, dependent on cove size and installing the Altro Whiterock with a 2" overlap. The juncture is then finished with Altro sanitary sealant or tamper-resistant security sealant.

This installation technique is easier to install versus a heat-welded transition and offers enhanced security over water ingress. The overlap detail is an acceptable detail in most applications (showers, health care, veterinary, kitchens, and etc.).

**Note:** Altro W39 adhesive is the recommended choice for all Whiterock installations across all BMH care levels.

\*Tamper-resistant security sealant must be applied according to the manufacturer's instructions. For other installations, Altro sanitary sealant is suitable.