


External V-plug/butterfly corner

Floor-to-wall overlap transition

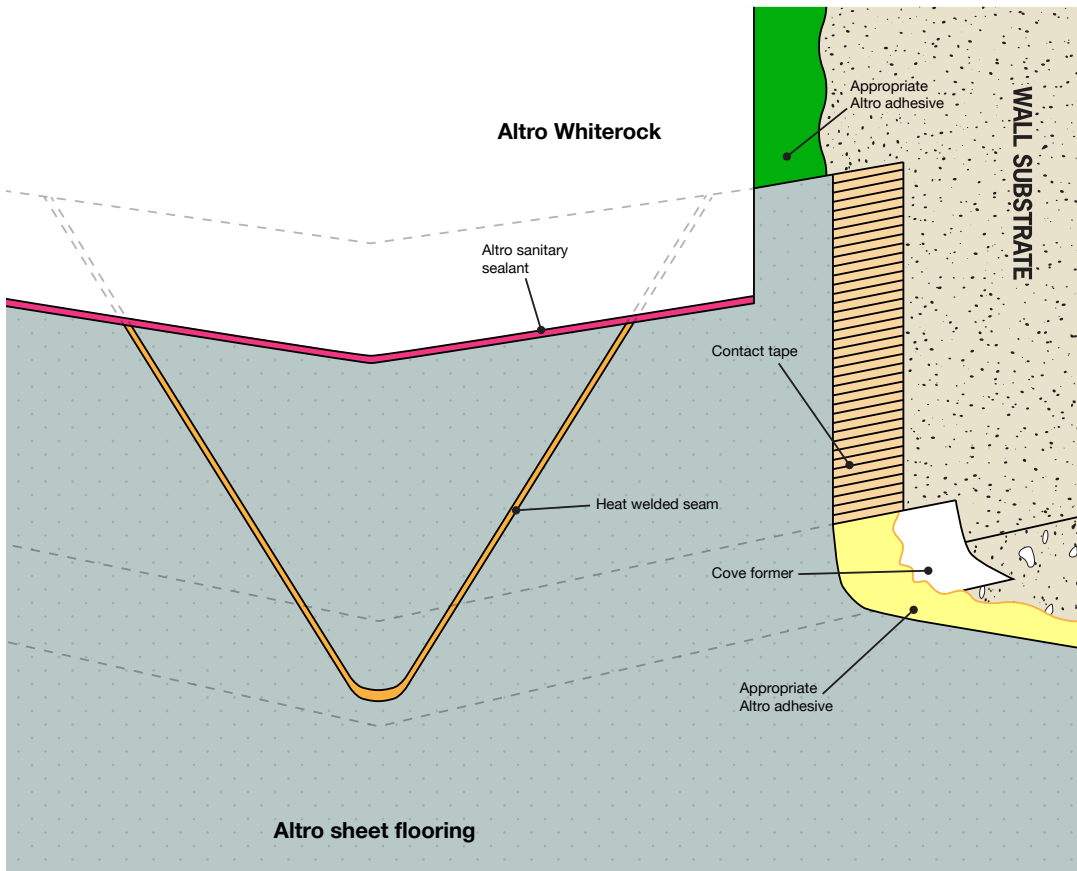

An overlap transition from floor-to-wall is our preferred installation method and is utilized in most installations. It is completed by installing the flooring 6" – 8" up the wall, dependent on specified cove size and installing the Altro White Rock with a 2" overlap. The juncture is then finished with Altro sanitary sealant.