



altro

installation techniques and detailing


transition with other floor surfaces

JANUARY 2006

For locations where sheet vinyl flooring must be finished to another floor surface with a water tight seal. A Visedge VR vinyl securing strip* should be installed along the transition. The sheet vinyl flooring is fixed down then cut in, grooved and hot welded to the PVC insert within the Visedge system.

*Visedge and installation instructions from:
Howe Green Limited, Tel 01920 463230, Fax 01920 463231
e-mail info@howegreen.co.uk.

Drawing Ref. D12/08/05

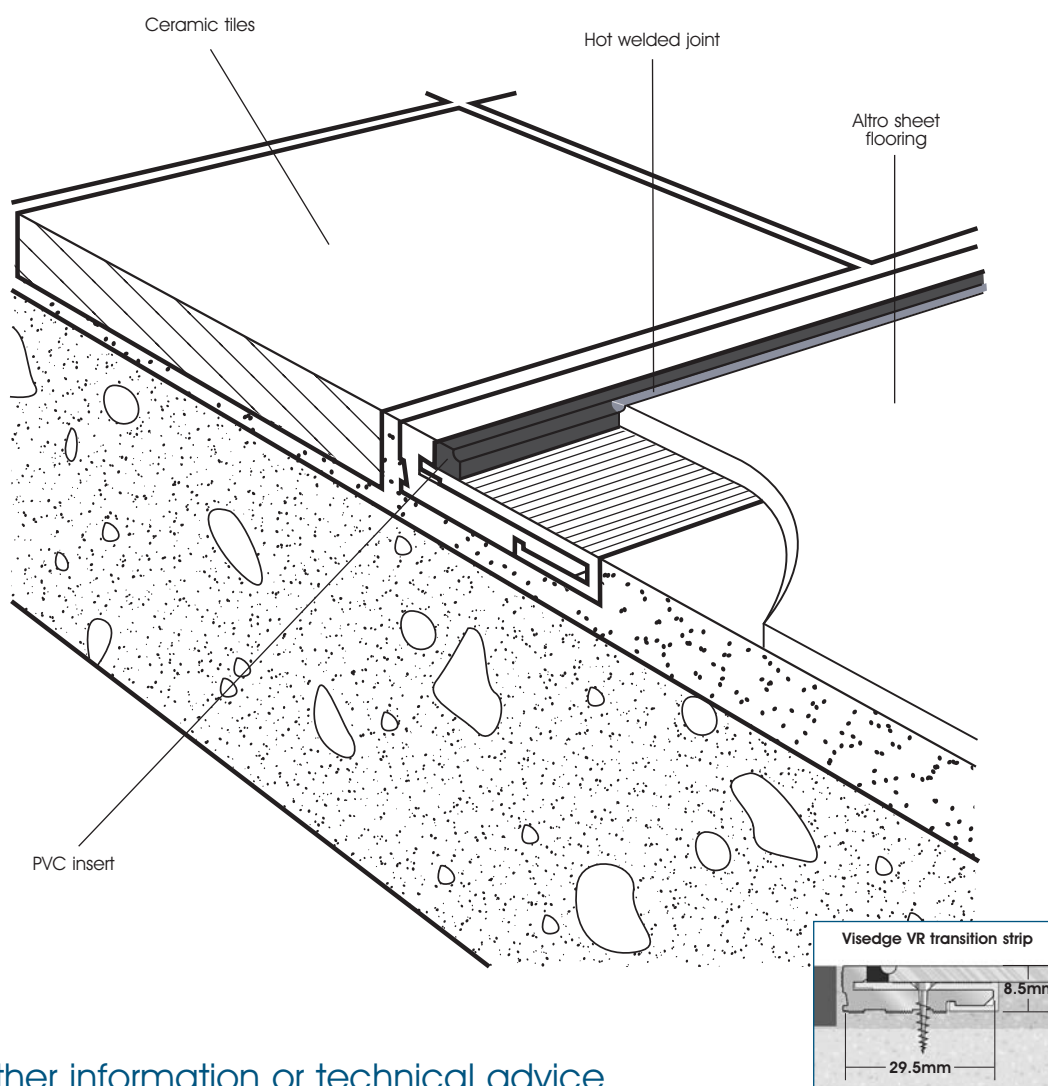

for further information or technical advice

tel: 01462 707600 fax: 01462 707515

e-mail enquiries@altro.com or explore www.altro.com