



Floor finishing diagrams

Methods of terminating Altro flooring when not using an overlapped wall panel


updated 12/12/18

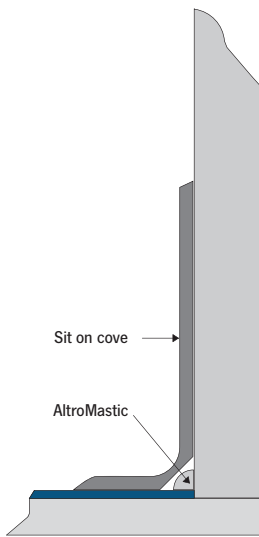


Sit on cove detail

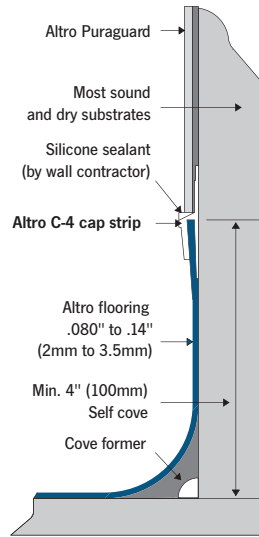


C-4 detail

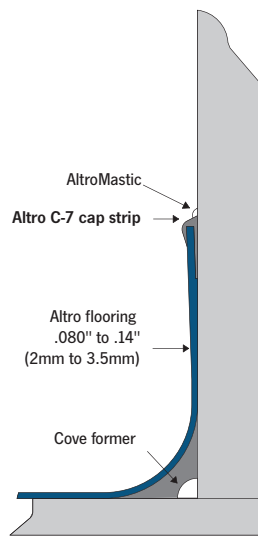


C-7 detail

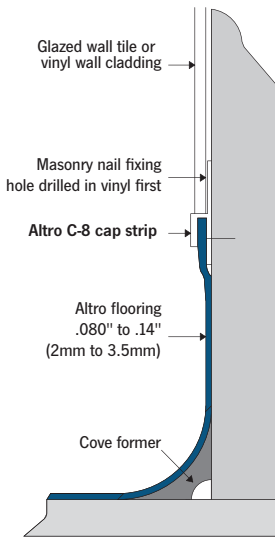

C-8 detail

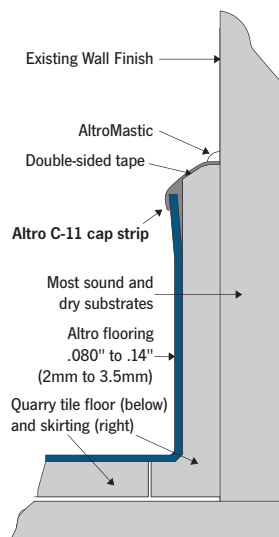

C-11 detail

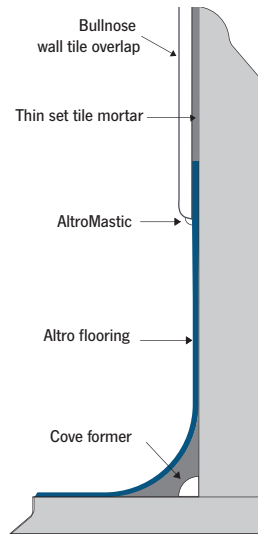

Bullnose wall tile overlap detail

Sit on cove

Floor transitions up wall without use of cove former.

C4 cap strip

Transitions between Altro Puraguard wall protection and Altro flooring.

C7 cap strip

Flooring cap to terminate Altro flooring on standard wall surface.

C8 cap strip

Transitions between Altro Whiterock or wall tiles and Altro flooring.

C11 cap strip

Flooring cap to terminate Altro flooring over existing skirting.

Wall tile overlap

Thin set mortar can assist when installing bullnose wall tiles with Altro flooring.