


altro

Flat laying with wood or residential wall base

updated 04/15/21

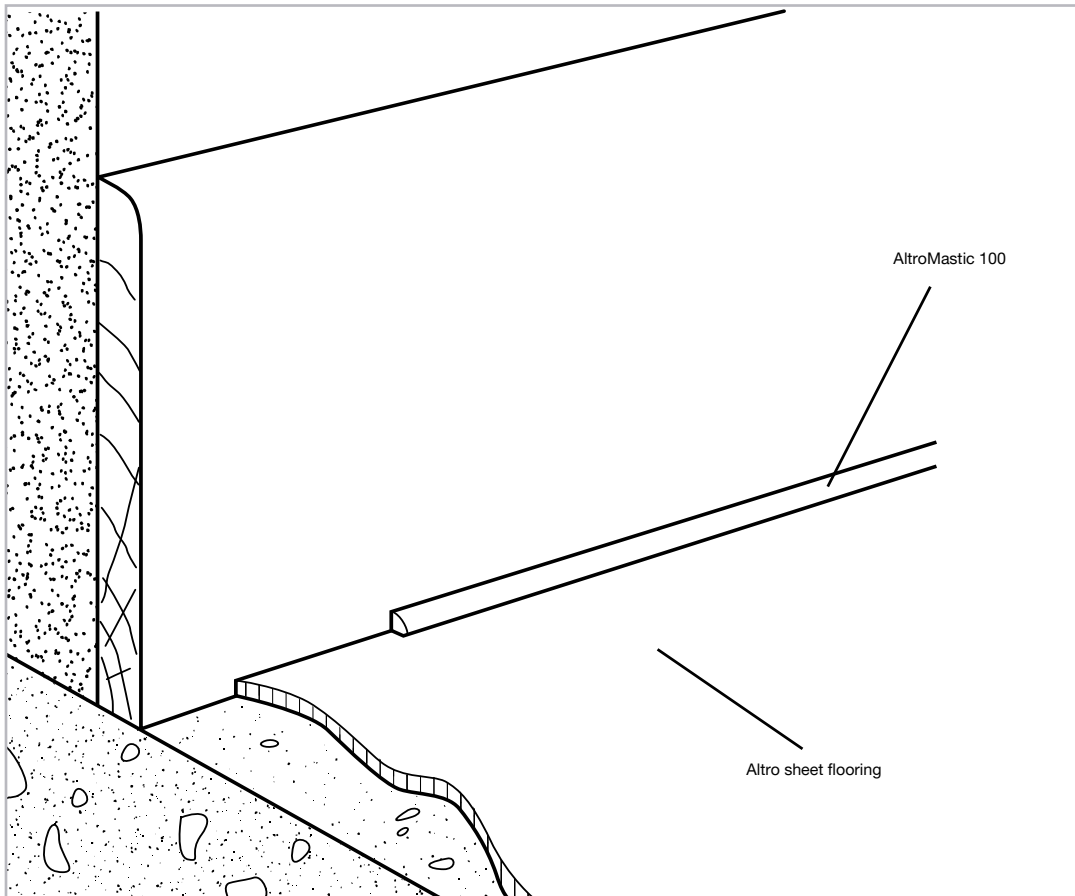

For areas not subjected to excessive spillage, cut the floor covering flush to the perimeter walls and skirtings (already in place). Application of AltroMastic 100 to the perimeter is recommended.