



Overlap installation of Altro Whiterock™ recess shelf A900 with Altro Tegulis

The overlap installation of the Altro Whiterock recessed shelf A900 is not intended to be done in behavioural mental health applications and areas where the public may pick or peel at the shelf.

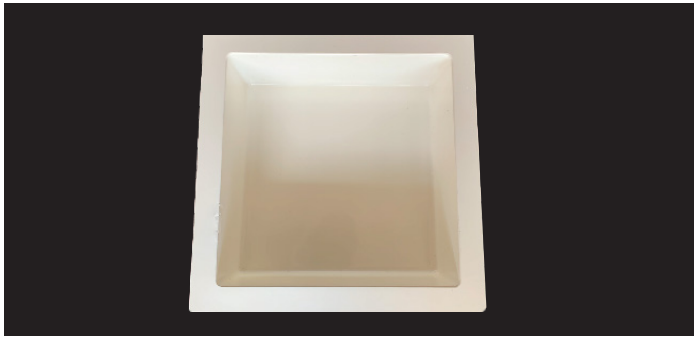

1. The outer flange of the recessed shower shelf can be cut back to a minimum of 1 ½" for an improved visual perspective. Corners can also be rounded off if preferred.

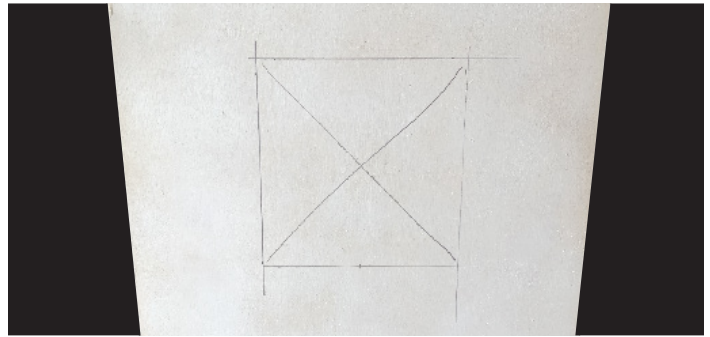

2. Use a datum line or other reference lines to determine the location on the wall substrate where the Altro Whiterock recessed shelf A900 will be installed. Transfer these measurements to the Tegulis panel and cut the panel opening approximately 10 1/8" x 10 1/8" for the 10" x 10" recessed body to fit into the cut out with ease.




3. Adequate support must be within the wall substrate to support the recessed shelf and weight of its contents.



4. Install the Altro Tegulis panel per the Altro Tegulis installation guide.



5. Apply AltroFix™ MP600 to the back side of the flange. Install the recessed shelf into previously installed Altro Tegulis panel. Roll flange to ensure proper adhesive bond.

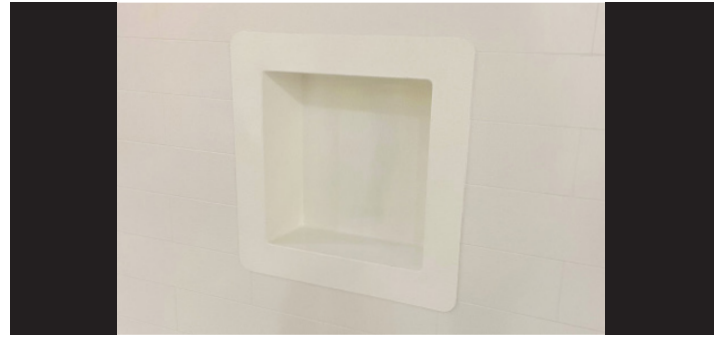

6. After the Installation is complete, the edges of the recessed shelf must be sealed with sanitary sealant to prevent water ingress.