


## Installation techniques and detailing

Self-coved to architrave

For locations where a flush finish with no exposed edges is required to an upright such as a door architrave, a CF38R / CF20R radius cove former should be trimmed diagonally back from approx. 200mm – 300mm to a point, then fitted to the junction of the wall and floor. The Altro sheet flooring should be coved over this section up to a

minimum height of 100mm and finished into the required finishing strip. The cove former, Altro flooring and finishing strip (if appropriate) used in this section must be adhered with a suitable contact adhesive. All mitres and joints within the coving must be hot welded.

## Drawing Ref: D9/03/05

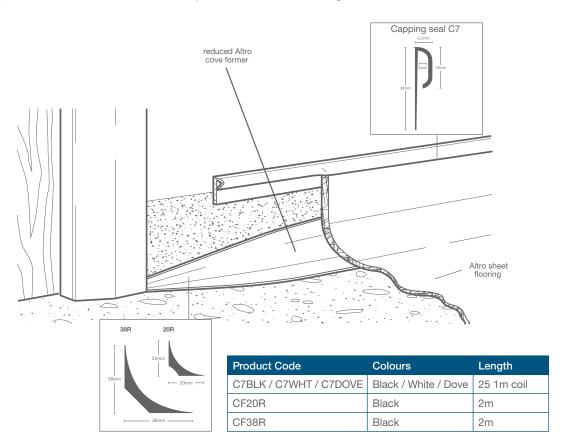

## For further information or technical advice tel: 01462 707600

email: enquiries@altro.com or www.altro.com