

Installation techniques and detailing

Transition with clamping channel


June 2020

For locations where the drainage of liquid spillages from floors is a necessity and a watertight seal must be formed with the drain channel. For clamping type channel gullies* which have been installed in accordance with the manufacturer's instructions. The sheet vinyl flooring must be dressed down and adhered with a water

resistant adhesive into the drain outlet and be secured by the clamping section.

*For example those manufactured by Wade International, Tel 01787 475151; Fax 01787 475579; e-mail tech@wadedrainage.co.uk.

Drawing Ref. D14/03/05

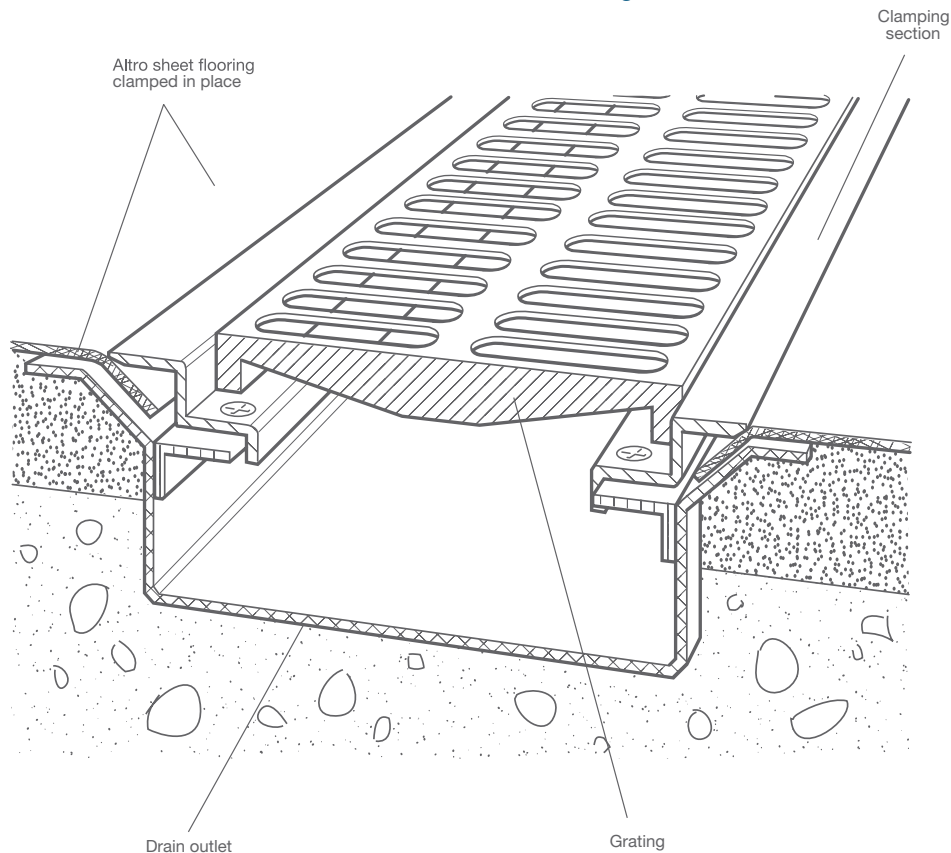

For further information or technical advice

tel: 01462 707600

email: enquiries@altro.com or www.altro.com