


# Installation techniques and detailing

## Transition with other floor surfaces

For locations where sheet vinyl flooring must be finished to another floor surface with a water tight seal. A Visedge VR vinyl securing strip\* should be installed along the transition. The sheet vinyl flooring is fixed down then cut in, grooved and hot welded to the PVC insert within the Visedge system.

\*Visedge and installation instructions from:  
Howe Green Limited, Tel 01920 463230, Fax 01920 463231  
e-mail info@howegreen.co.uk.

**Drawing Ref. D12/08/05**

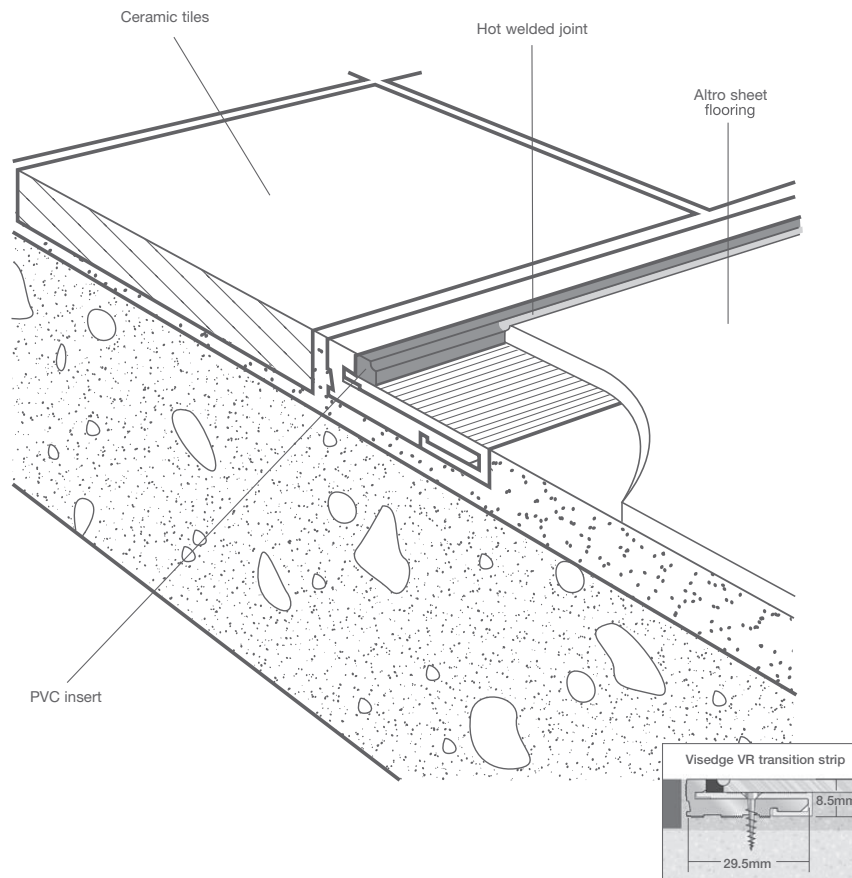

**For further information or technical advice**

**tel: 01462 707600**

**email: [enquiries@altro.com](mailto:enquiries@altro.com) or [www.altro.com](http://www.altro.com)**