




altro

Modifying an existing drain

Cutaway detail of a modified drain

updated 11/04/19

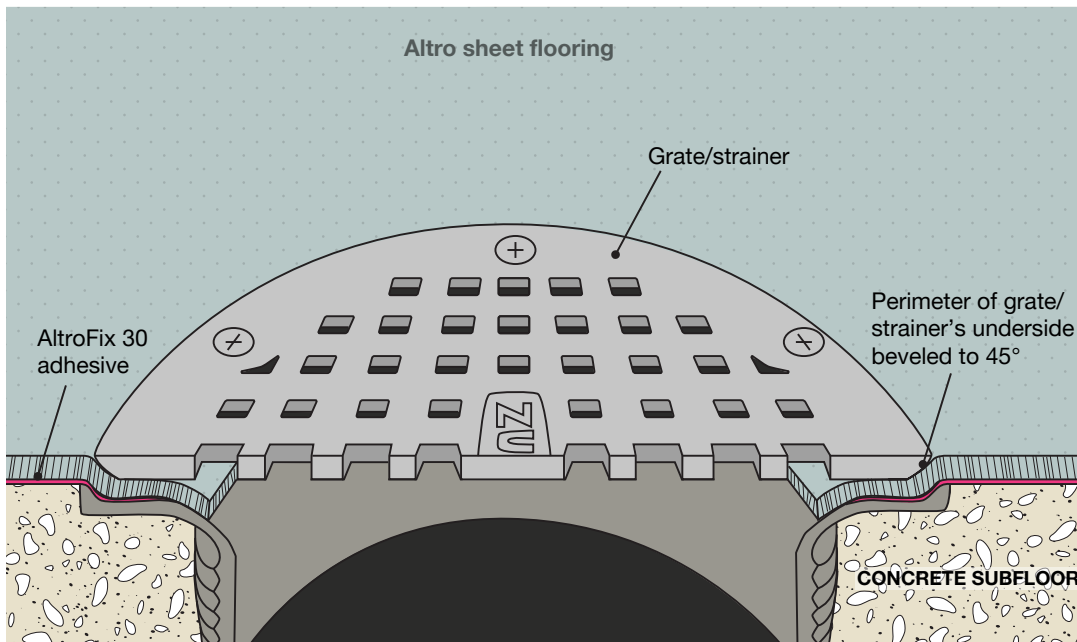

TIPS

- Cutting to the outside of the screws will cause the material to be short of the drain plate once it is re-installed.
- In most cases, it will be necessary to weigh down the drain area to allow the adhesive to set-up. Failure to weigh down the drain area during this process may cause a bubble or a pucker in the Altro floor covering, to which there is no remedy.