




altro

# Flat lay with commercial-grade vinyl or rubber wall base

updated 04/15/21

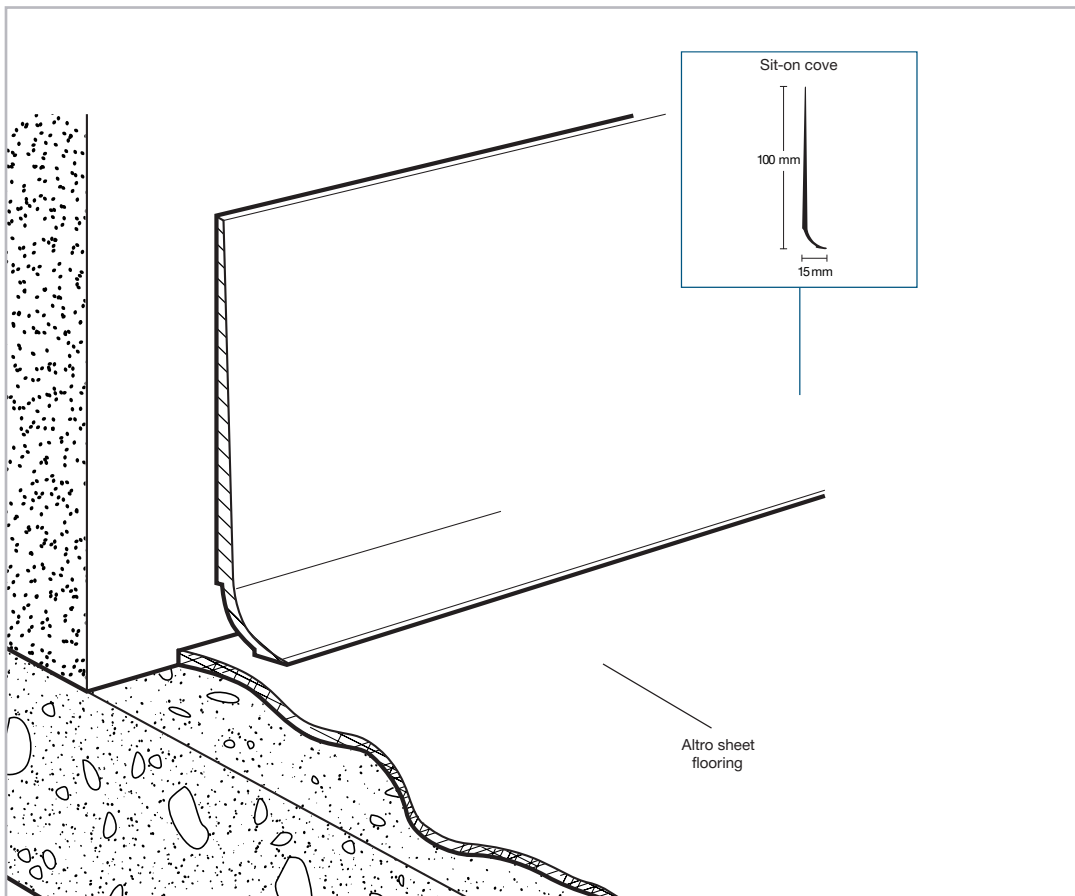

For areas not subjected to excessive spillage, cut the sheet vinyl flooring to the perimeter wall and seal with AltroMastic 100.

Fit a commercial-grade cove base, supplied by others, over the flooring and fix it to the wall with a suitable contact adhesive.

Take care that the edge of floor covering is hidden behind wall base.