


Installation techniques and detailing

Set-in cove skirting

The set-in cove skirting supplied by others should be fixed to the perimeter walls with a suitable contact adhesive before the main flooring. Seal adjacent sections and mitres within the skirting with AltroMastic 100. Lay the sheet flooring, cut

in and groove and hot weld it to the base of the skirting. Flooring thickness suitability: 2.0mm and 2.5mm with base lip and 3.0mm / 4.0mm with base lip removed.

Drawing Ref: D3

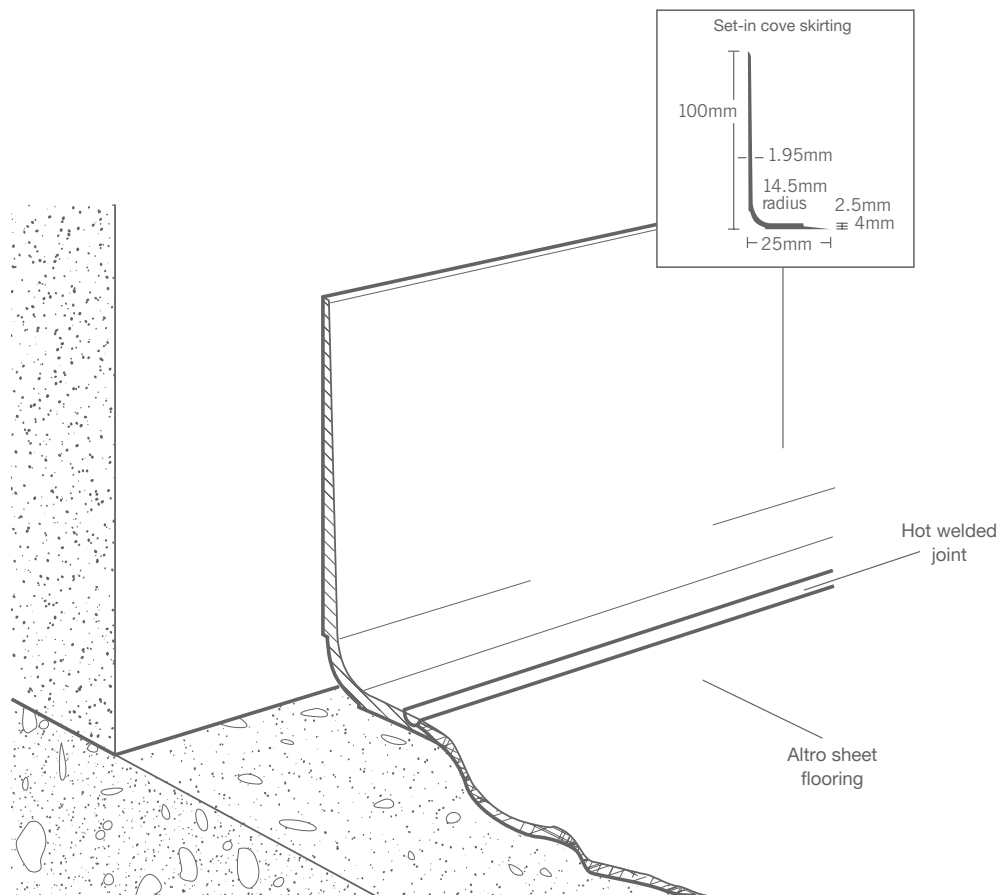

For further information or technical advice

tel: 01462 707600

email: enquiries@altro.com or www.altro.com