



altro

the future is safer with altro

# Installation techniques and detailing


Sit-on cove

January 2016

Cut the sheet vinyl flooring to the perimeter wall and seal with AltroMastic 100. Fit a sit-on cove, supplied by others, over the flooring and fix it to the wall with a suitable contact adhesive.

Not recommended in areas subject to excessive liquid spillage.

**Drawing Ref: D2**

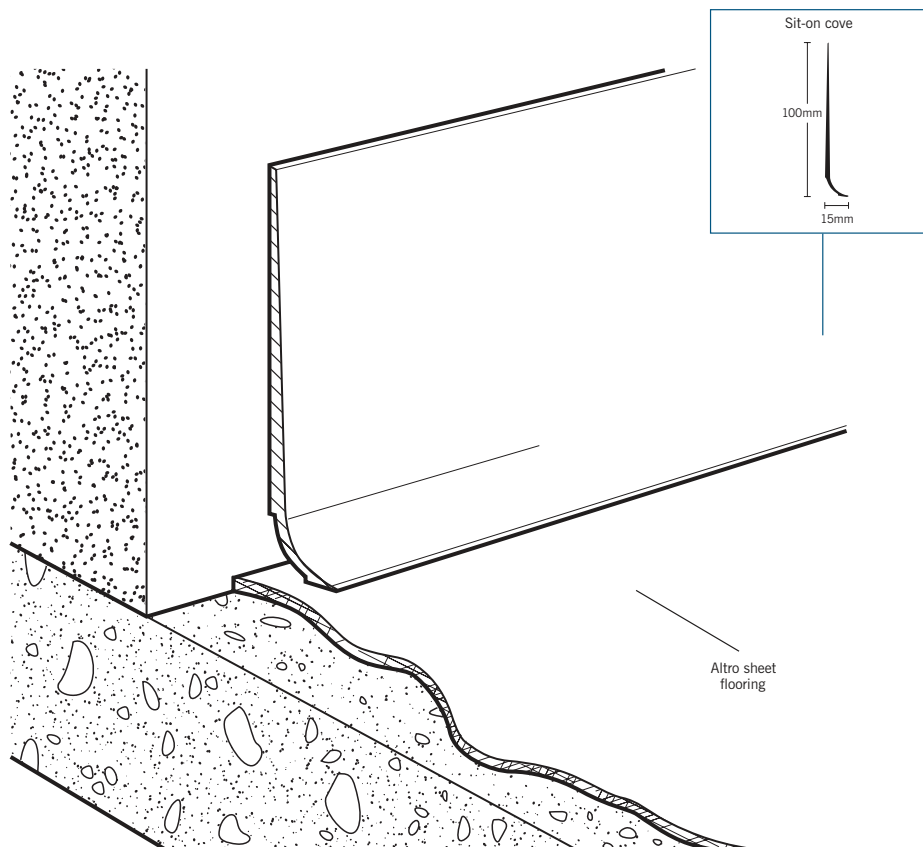

For further information or technical advice  
tel: 01462 707604 fax: 01462 707515  
email: [enquiries@altro.com](mailto:enquiries@altro.com) or [www.altro.com](http://www.altro.com)