


# Altro Tegulis™ external corner trim detail

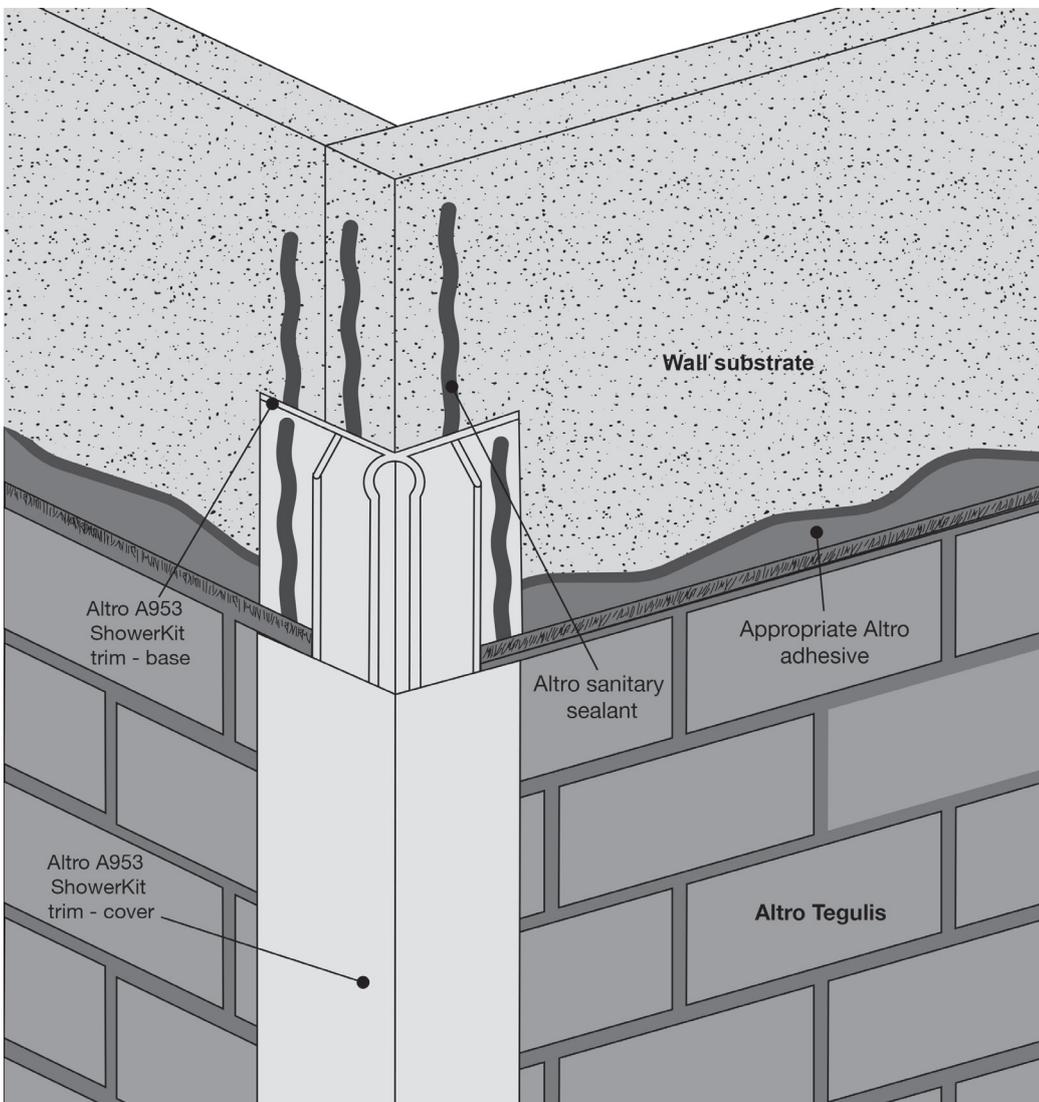

## Codes

### AltroFix W157

AltroFix W157 1-part adhesive (not recommended for wet environments).

### AltroFix W139

AltroFix W139 2-part adhesive.

### AltroFix W639

AltroFix W639 2-part MS Polymer adhesive.

### A953

2-part Altro ShowerKit trim.

**For further information or technical advice**  
**tel: 01462 707600**  
**email: [enquiries@altro.com](mailto:enquiries@altro.com) or [www.altro.com](http://www.altro.com)**