

# Installation techniques and detailing


Altro resin flooring finish at floor expansion joints

January 2017

All floor joints (movement) should be transferred up through the Altro resin toppings where these exceed 500 microns. Arrises should be in a state of good repair before receiving the Altro resin finish (Altro Patch should be used to correct defective arrises as shown). Altro Expand

should be installed into the clean cut joint detail after priming the vertical faces with Altro Prime. Joint width and depth should be agreed before installation (generic guide in depth = 1.5 x width).

**Drawing Ref: RF1/07/00**

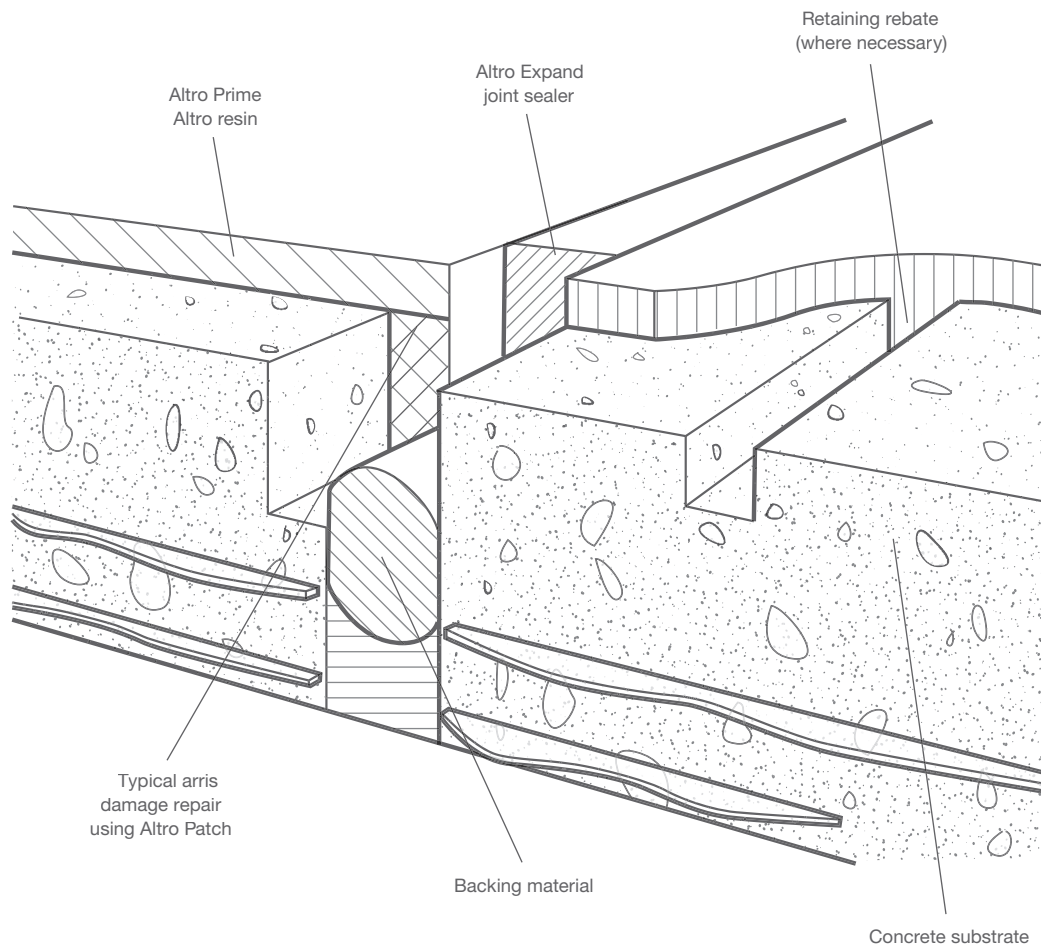

**For further information or technical advice**

**tel: 01462 707604 fax: 01462 707515**

**email: [enquiries@altro.com](mailto:enquiries@altro.com) or [www.altro.com](http://www.altro.com)**