



altro

installation techniques and detailing


Altro resin flooring finished to stainless steel drainage

NOVEMBER 2005

The Altro resin flooring detail to stainless steel drainage must adhere to the following principles. Firstly, the stainless drainage system design must be compatible with Altro resin finishes. The body of the drain should incorporate an inverted 'U' section to create a stable vertical seal face for the AltroExpand joint sealant (as shown). Raw edge and clamping type drainage systems are not acceptable.

The Altro resin topping must incorporate a reinforcing toe at the junction of the AltroExpand. This joint void can either be formed when laying the Altro resin system, or cut after installation and cure using a diamond cutter (with dust recovery). Contact surfaces (Altro resin and stainless steel) should be primed with AltroPrime and AltroExpand to tack cure. AltroExpand should be installed after careful masking ensuring correct levels exist between the Altro resin and drainage to eliminate ponding.

Drawing Ref: RF5/11/05

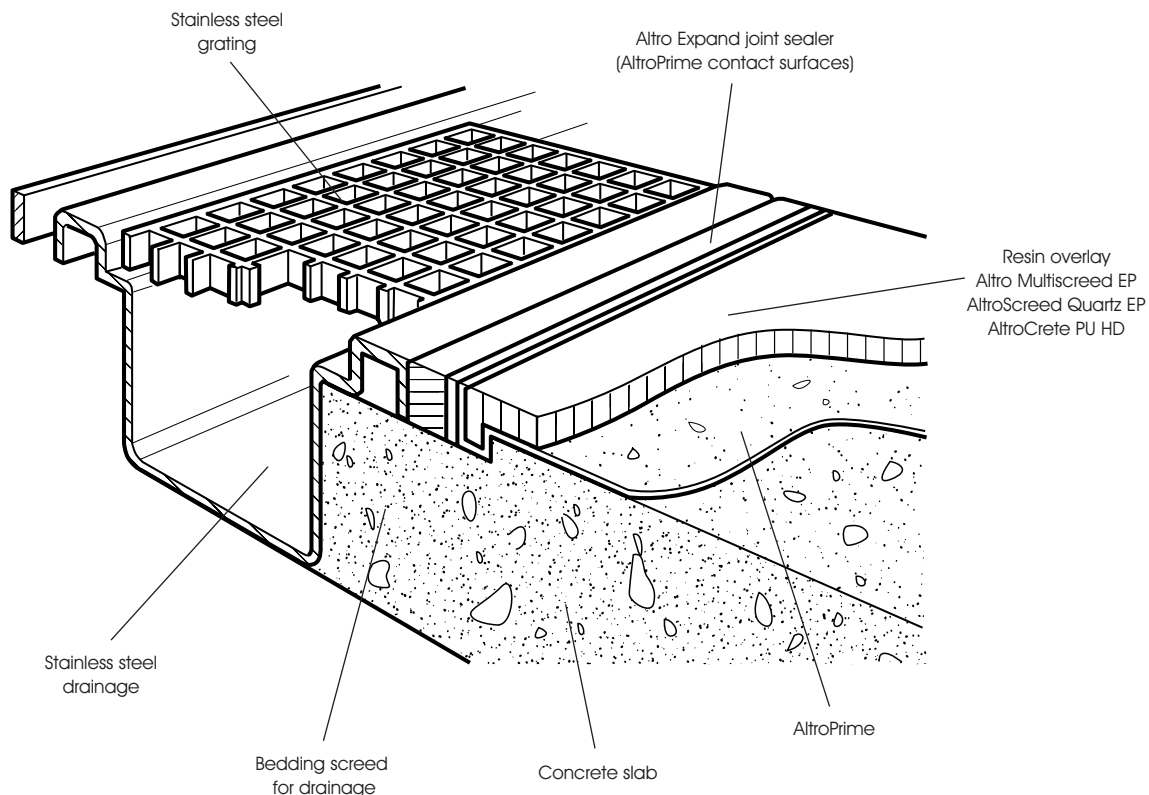

for further information or technical advice

tel: 01462 707600 fax: 01462 707515

e-mail enquiries@altro.com or explore www.altro.com