



altro

the future is safer with altro


# Altro Whiterock™ hygienic PVCu wall cladding to Altro FlexiJoint™ detail

JULY 2011

typical specification (Ref: W11)

Altro Whiterock hygienic PVCu wall cladding 2.5mm thick installed over most sound, dry and level substrates, fixed with AltroFix W139 adhesive and double sided tape (A815) positioned approximately 3mm from the edge of the panel.

Joint gaps formed to 3.4mm width by using Altro spacer bars for parallel edges. Apply a uniform bead of Altro AP600 MS polymer sealant within the gap. Insert Altro PVC FlexiJoint trim into the gap and roll with a small hand roller.

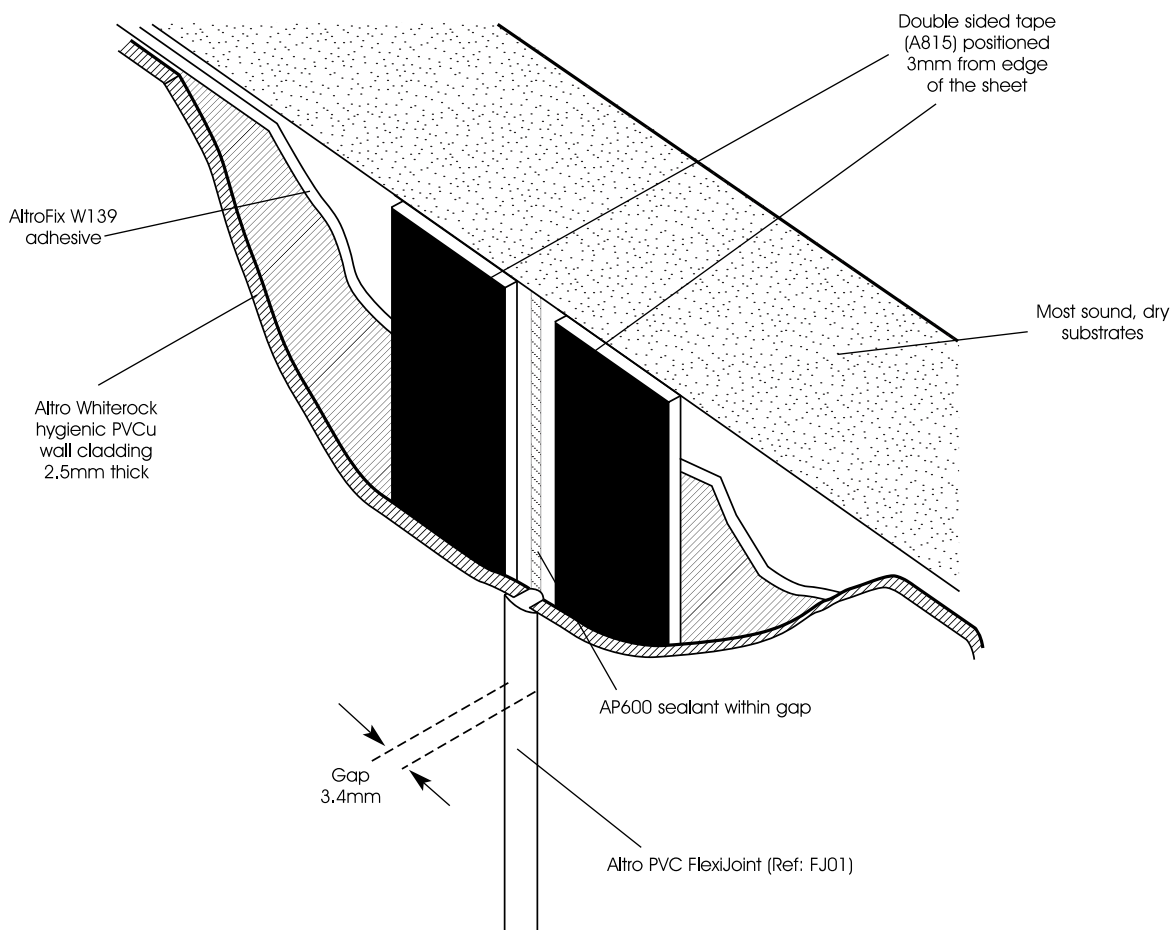

for further information or technical advice

tel: 01462 707600 fax: 01462 707504

e-mail: [enquiries@altro.com](mailto:enquiries@altro.com) or explore [www.altro.com](http://www.altro.com)